

3.1 Standard accessories


(Fig.3.1-1)
0001418 Bead lifting tool

(Fig.3.1-2)
0025946 Tire lever WAVE

(Fig.3.1-3)
4028843 Pneumatic mount / demount device easymont pro (extended version)

(Fig.3.1-4)
4028228 Quick exchange tool Kit

(Fig.3.1-5)
0011064 Insert for mounting head (5 pcs.)

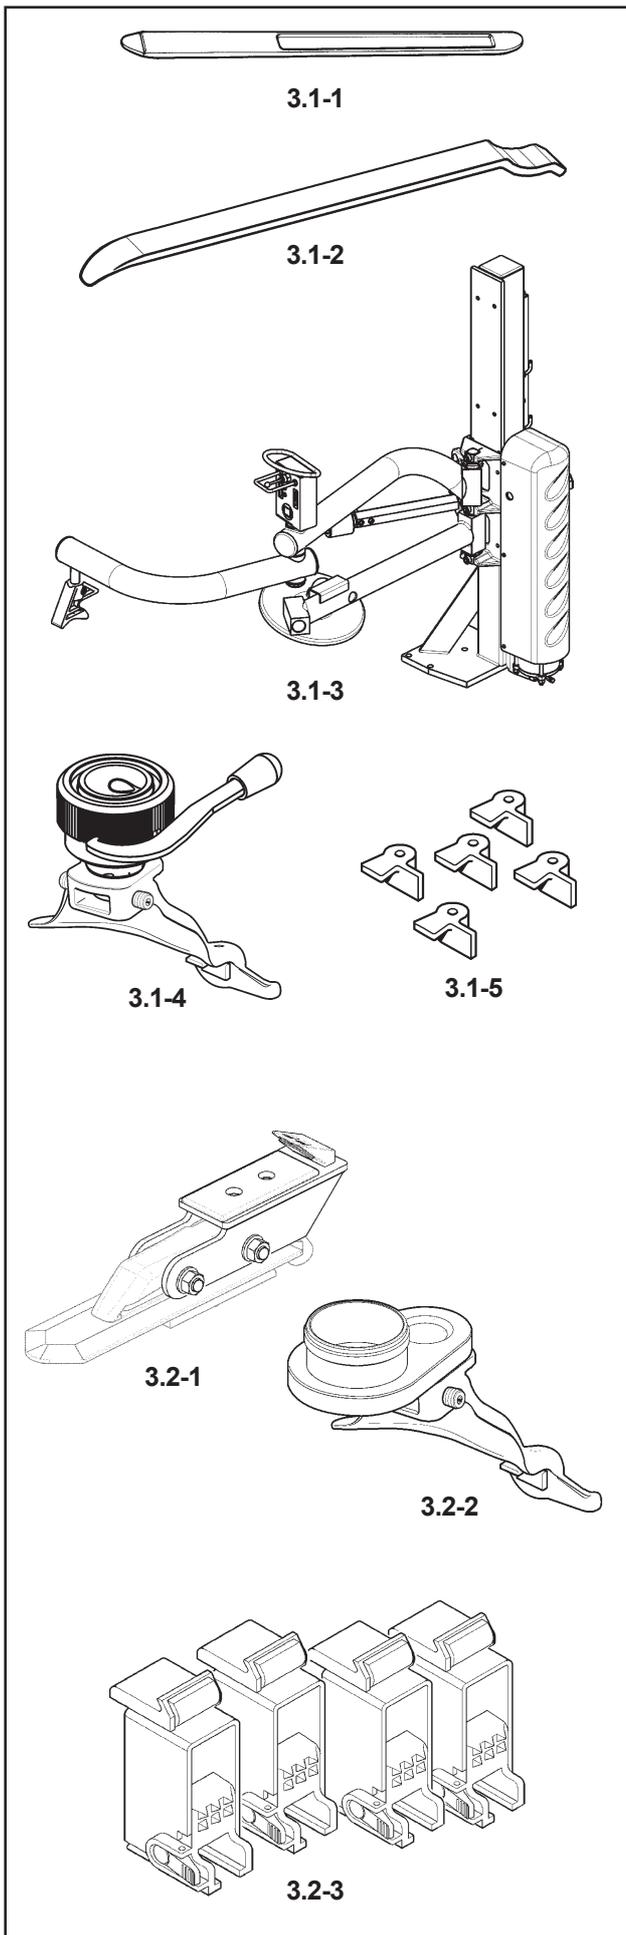


3.2 Accessories on request

(Fig. 3.2-1)
4028590 Sliding jaw +4 inch kit
 Extend the grip of the turntable clamps, so that you can work on rims with a diameter up to four inches bigger than the maximum allowed by your tyre changer. For use with the *Rapid change-over kit for tool with +4 inch extension* (code: 4028629).

(Fig. 3.2-2)
4028629 Rapid change-over kit for tool with +4" extension
 The standard tool can rapidly be substituted with the tool with extension, so that you can work on rims with a diameter up to four inches bigger than the maximum allowed by your tyre changer. For use with the *Sliding jaw +4 inch kit* (code: 4028590).

(Fig. 3.2-3)
4028570 Motorcycle adapters
 To be attached to the clamps of the turntable to clamp motorcycle rims from the outside.

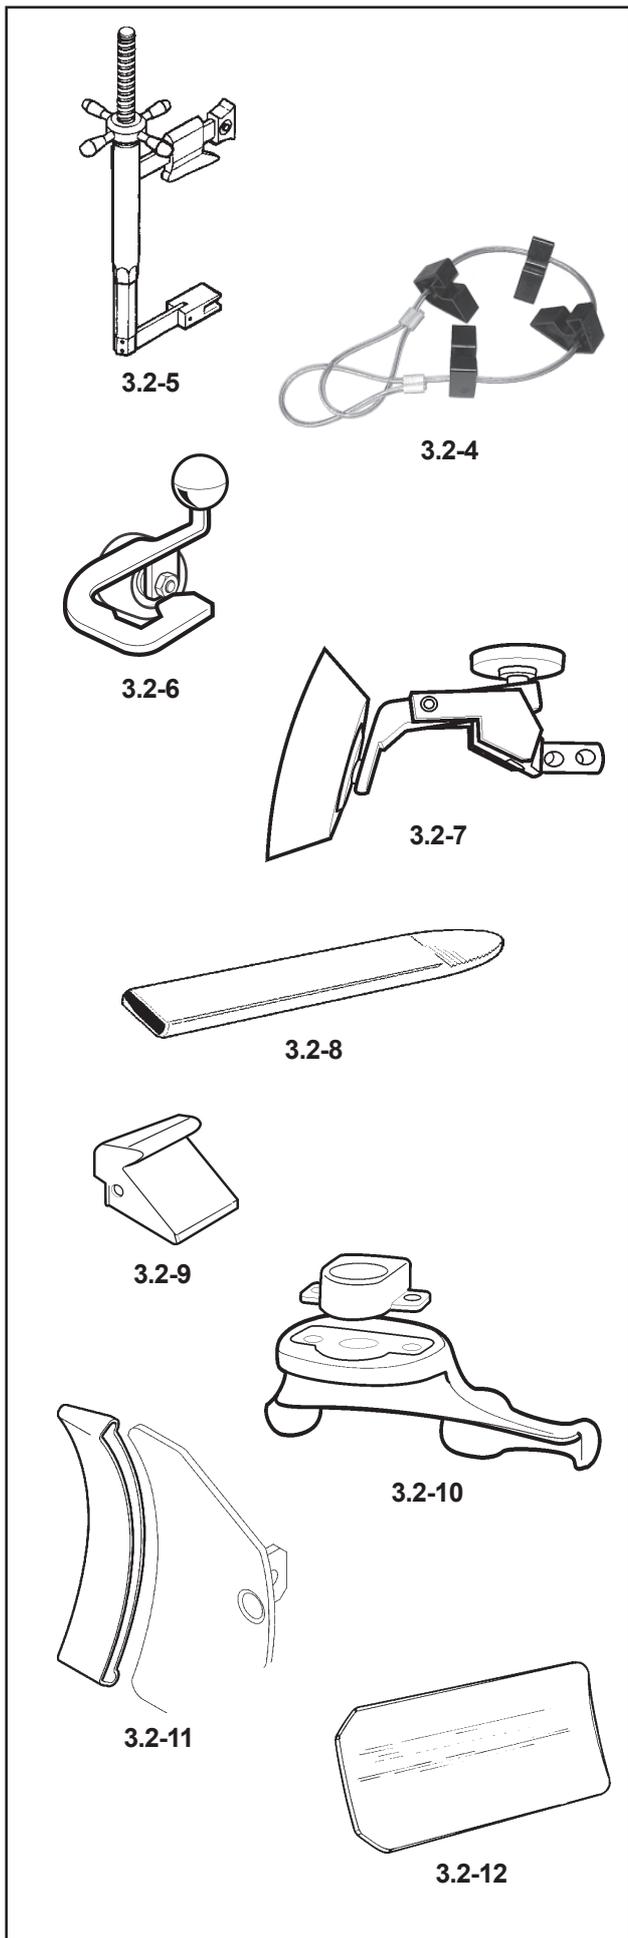

(Fig. 3.2-4)

4028648 MBP Magic Bead Pusher

This accessory consists of a set of plastic inserts fixed so that they are equidistant on a towing cable. The inserts hold the bead down in the rim channel, guaranteeing easy bead insertion.

(Fig. 3.2-5)

4024078 Bead depressor clamp

Facilitates the mounting of the top bead especially on low profile and stiff tires.

(Fig. 3.2-6)

4025966 Bead Pressing Roller

This bead-depressing roller can be quickly installed on mounting head.

(Fig. 3.2-7)

4027658 Demounting disk tool

To break the tyre bead directly on the turntable.

(Fig. 3.2-8)

0024180 Lever guard

To avoid damaging the rim during the mounting phase.

(Fig. 3.2-9)

0026853 Light alloy rim protector

To be slid onto the clamps of the turntable to prevent any possible damage to the rim when operating on light alloy rims

(Fig. 3.2-10)

4024784 Plastic mounting head

Generally we recommend:- Plastic tool on alloy rims.

(Fig. 3.2-11)

0026582 Bead Breaker Blade Protection

Prevents damage to the rim during bead breaking.

(Fig. 3.2-12)

4008755 Motorcycle bead breaker blade

To be attached to the bead breaker blade to facilitate loosening of motorcycle tyres